

COMPATIBILITY CHART FOR MANGO FAT CAT CHARGE CARD

BRAND	COMPATIBLE
Apple	iPod (3rd, 4th, 5th Gen), Mini, Nanao, Photo, Video, Shuffle, iPhone, iTouch
BlackBerry	6210, 6220, 6230, 6280, 6510, 6710, 6720, 7100g, 7100i, 7100r, 7100t, 7100v, 7100x, 7105t 7130e, 7210, 7230, 7250, 7270, 7280, 7290, 7510, 7520, 7730, 7750, 8100 Pearl, 8700c, 8700f, 8700g, 8703e (8800), XDAIII
BlackBerry	Pro, Storm
BlackBerry headset	
Bluetooth Headset	
Bluetooth Headset (Moto)	HS-850
Canon	750, V3
Creative	ZEN V Plus, ZEN V, ZEN Micro, ZEN MicroPhoto, ZEN Neeson, MuVo, Slim ZEN, ZEN Touch, ZEN Vision, ZEN Vision M, MuVo2, MuVo2 FM (ZEN PMC, ZEN Sleek)
Dell	Axim X3/X5
Fuji FinePix	4700
Garmin	Forerunner 205, 203 & 301, Edge 205 & 305
iRiver	T10, T30, PMP-100, PMC-100, H300, iGP-100, iFP-1000, iFP-900, iFP-800, iFP-700, iFP-1000, iFP-900, iFP-800, iFP-700, iFP-300, N10
Kyocera	E2000, Tempo
LG	AX275, AX8600, Chocolate, EnV, LX150, VX5400, VX8350, VX 8500, VX8600, VX8700, VX9400, VX9900, KE970, KG90, KG800, KG810, KG320, U970 (VX8500), Shine U970, CU575 Migo, VX3300, VX3400, VX3450, VX4650, VX4700, VX5200, VX5300, VX6100, VX7000, VX8000, VX8100, VX8300 AX300, AX830, ENV2, LX400, UX300, UX830, VX5500, VX8360, VX8560/Chocolate 3, VX8610 Decoy
Mio Digi Walker	168, 268, 269, 269+, 336BT, 336i, 339, 8390, 8870, A201, A701, C510E, C710, P350, P550
Motorola	ic402, ic502, A780, E770v, E1070, L2, L6, PEBL, MOTOKRZR K1&K1m, RAZR series: V3r, V3t, V3xx, V3m, V3, V3c, V3i, V3m, V3x, Z3, MOTOSLVR L7c, V360, V360v, SLVR, V190, V195, V197, V235, V323, V323i, v325, V325i, V360, V361, V365, W315 (A1200, A70, A732, A780, C305, C363, E2, E680, E680i, Q, U6, V191, V320, Cingular L2/L6/L6g 388C, A630, A830, A835, A920, A1000, C331 & C332 (TDMA versions), C333 (CDMA with antenna), C341, C343, C353 (TDMA), C975, E310, E1000, MPx220, ROKR, T280i, T300p, T720, T720i, T721, T721i, T722i, T730, T731, V70, V260, V262, V265, V300, V400, V500, V505, V525, V545, V547, V550, V551, V600, V620, V635, V710, V810, V975, V1050, V60, C60i, V60c, V60P (PTT), V60s, V60t, V60g, V60x, V66, V66i, V120C, 120t, 120x, 120c, 120e, 270c, 280 V200 personal computer (A760, A840, A845, A860, A925, im1000, M300) RAZR2, V8, V9, V9m, Q9, Q9h, Q Global
Nokia	N70, N71, N73, N75, N76, N80, N80e, N800, N90, N91, N918GB, N92, N93, N95, E50, E51, E61, E62, E65, E90, 770, 2865i, 3155i, 3250, 5200, 5300, 5500, 6070, 6080, 6085, 6086, 6101, 6102i, 6103, 6111, 6125, 6126, 6131, 6133, 6136, 6151, 6155i, 6165i, 6233, 6265, 6265i, 6270, 6275i, 6280, 6282, 6300, 6555, 7360, 7370, 7373, N72, N75 E60, E70, 1100, 1101, 1110, 1110i, 1112, 1221, 1260, 1261, 1600, 2115i, 2116i, 2125i, 2126i, 2128i, 2260, 2270, 2285, 2300, 2310, 2600, 2650, 2652, 3100, 3105, 3108, 3120, 3200, 3205, 3285, 3300, 3285, 3300, 3350, 3360, 3361, 3390, 3395, 3510, 3510i, 3520, 3530, 3560, 3570, 3585, 3585i, 3587i, 3589i, 3590, 3600, 3620, 3650, 3660, 5100, 5140, 5140i, 5210, 5510, 6010, 6015i, 6016i, 6019i, 6020, 6021, 6030, 6060 6061, 6100, 6108, 6170, 6200, 6220, 6225, 6230, 6230i, 6235i, 6236i, 6255i, 6260, 6310, 6310i, 6340, 6681, 6682, 6800, 6681, 6800, 6810, 6820, 6822, 7200, 7210, 7250, 7250i, 7260, 7270, 7280, 7360, 7380, 760 7610, 7650, 7700, 7710, 8260, 8265, 8265i, 8270, 8290, 8310, 8390, 8800, 8801, 8910i phones, 9210i, 9290, 9300, 9500 Communicators, N-Gage & n-Gage QD (6102, 6103, 6133, 6315, 2336 c&i, E62 6500 Classic, 8600 Luna, 7900 Prism, 8800 Arte, 8800 Sapphire, Arte, N85
Olympus	C-450 Zoom, U-10D, D-15D, D-20D, D-25D, D-30D, D-300D, D-400D, X-1, X-2, X-3, AZ-1, C-50Z, C-60Z
Palm/Tungsten	Centro, m515, m505, m500, m130, Zire 71, Tungsten T3/T2/C & W, TX Tungsten E2, T5/Lifedrive, Lifedrive, Showtime / Treo, 650, 680, 700p, 700w, 700wx, 750V
Panasonic	Lumix DMC-FX01
Samsung	SCH: A210, A310, A399, A475, A505, A509, A530, A539, A563, A564, A570, A591, A592, A595, A599, A610, A650, A670, A720, A790, A795, A800, A900, C100, C120, C130, C207, C225, C417, U340, U410, U540, U620, SGH: D100, D307, D347, D357, D407, D410, D415, D417, D500, D500, C/D508, D600, SGH: E100, E105, E300, E315, E316, E317, E330N, E335, E350, E370, E400, E530, E600, E630, E635, E700, E710, E715, E730, E760, E770, E800, SGH: K258, M500/MM-5600, SCH: N181, N182, N191, N195, N288, N330, N370, N375, N626, N635, SGH: N200, N400, N500, N620, N625, N628, SGH: P107, P207, P400, P408, P510, P735, SGH: Q100, Q200, Q208, Q300, SGH: S100, S200, S208, S300, S300M, S307, S308, S500, SGH: T100, T108, T200, T208, T209, T309, T319, T400, T408, T410, T500, T609, T619, T707, T709, T719, U410, U340, U620 SGH: V100, V200, V205, V206, SCH: U340, U410, U620, X199, X209, X219, X309, X319, X359, X640, SGH: X100, X105, X4216, X427, X427M, X450, X460M X475, X480, X495, X497, X507, X600, X460, X660, SPH: A420, A580, A640, A900, M500, T100 SPH: A920, A940, A820, A880, A800, A740, A760, A660, A600, A500, A460, MM-A700, VM-A680, VGA1000, SPH-N400, SPHN-N240, SGH: A437, A717, D807, D900, T519, T509, T809, T629, D520, D800, D830, D807, E550, 727, 780, E870, E900, P300, T509, T809, V804, X820, X830, Z150, Z400, Z510, Z540 (D820, D900), SPH-M610, SCH-U420, E900, E870, U740, Z510/Z560/Z400/Z510/Z510i, Trace, T629, T809, SCH: U470 Juke, U700 Gleam, U900 Flipshot, Blackjack II E210/F200/F210/M300/M305/M510/M520BEAT SGH- T539/T429/T439/T639/T409/I617/T729/R500, A513/A516/A737/A747/M210, SCH-R10/R410/R610, SGH- A117/A127/A226/A517/L768/L760/G608/G600/I607/I617, Ace i325, SPH: i325, M520, Instinct m800
Samsung Camera	Digimax U-CA3, V3, V4, 350SE, 230, 340, 370, 410, CYBER#, ViVi 2800
Sanyo	S1, Katana LX
Skype NetGear	5PH101
Sony Ericsson	D750i, J100a, J100c, J100i, J110i, J120i, J220a, J220c, J230c, J220i, J230i, K200i, K220i, K310a, K310c K310i, K510a, K510c, K510i, k550i, K550im, K610i, K601i, K618i, K750c, K750i, K758c, K790a, K790i, K800i, K810i, M600i, M608c, P990i, V630i, W200a, W200i, W300c, W300i, W550i, W550c, W580i, W600, W600c, W600i, W610i, W660i, W700C, W700i, W710c, W710i, W712a, W800, W800i, W800c, W810c, W830c, W803i, W850i, W880i, W900c, W900i, W950i, W958c, Z610i, Z710c, Z710i, Z520a, Z520c, Z720i, Z525a, Z525i, Z520c, Z530i, Z550a, Z550c, Z550i, Z558c, Z558i, Z601i, Z710i, Z750i (HBH-GV435
T Mobile	SDA-11, MDA Vario (inc co-pilot), MDA Pro, MDA Compact II, SDA, SDA Music, Dash
TomTom	GO, GO300, 500, 510, 700, 710, 910
Two Way Radios	
USB	For general charging where electronic device is supplied with USB charging cable. iPod Shuffle/Nano/Mini/Video